



Asus Eee PC 10.1" 1005HA

TOP BUBBLESHELL

1. Hook the front corners first then push down to snap the back

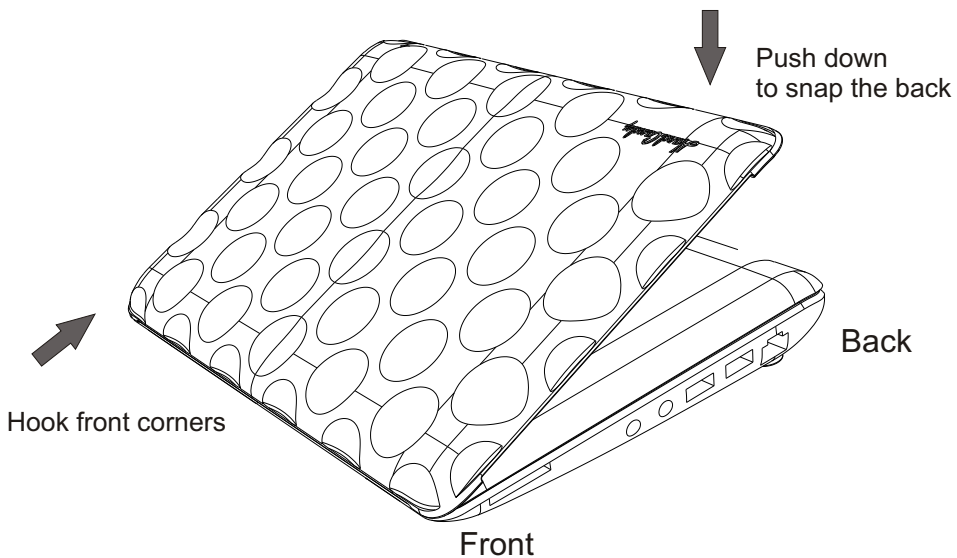


2. Top Bubble shell attached

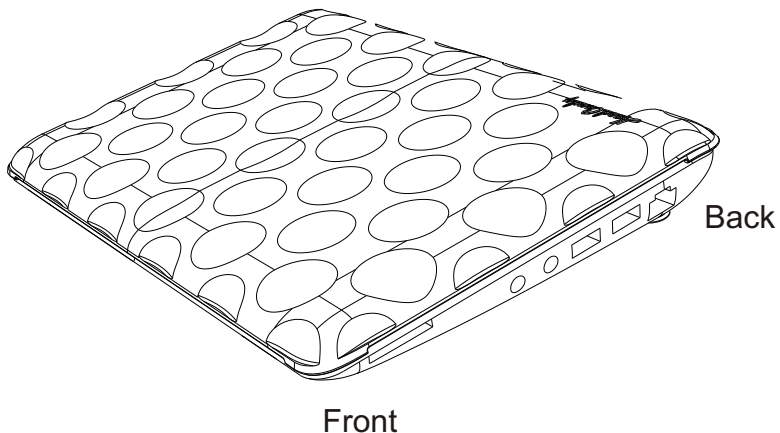


BOTTOM BUBBLESHELL

1. Turn the computer over. Hook the front corners first.
2. Push down on the back to snap the back corners

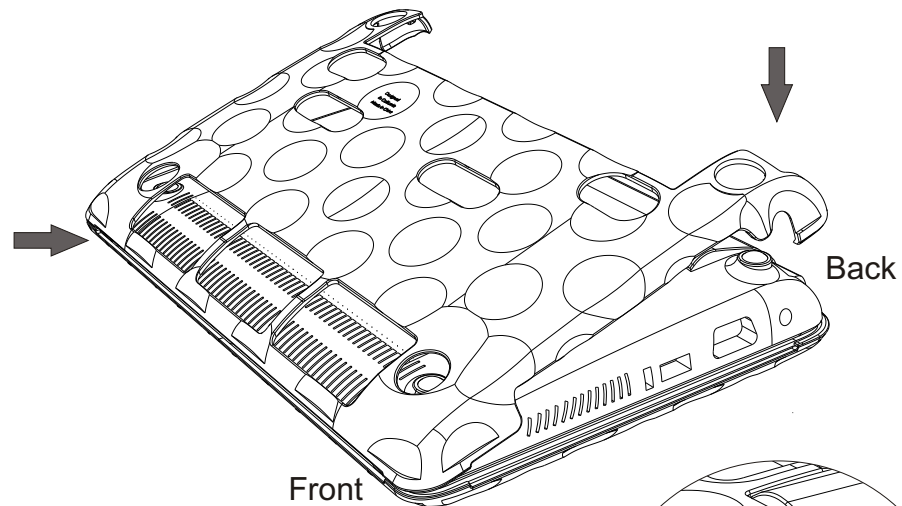


3. Make sure the snap is hooked underneath the screen hinge

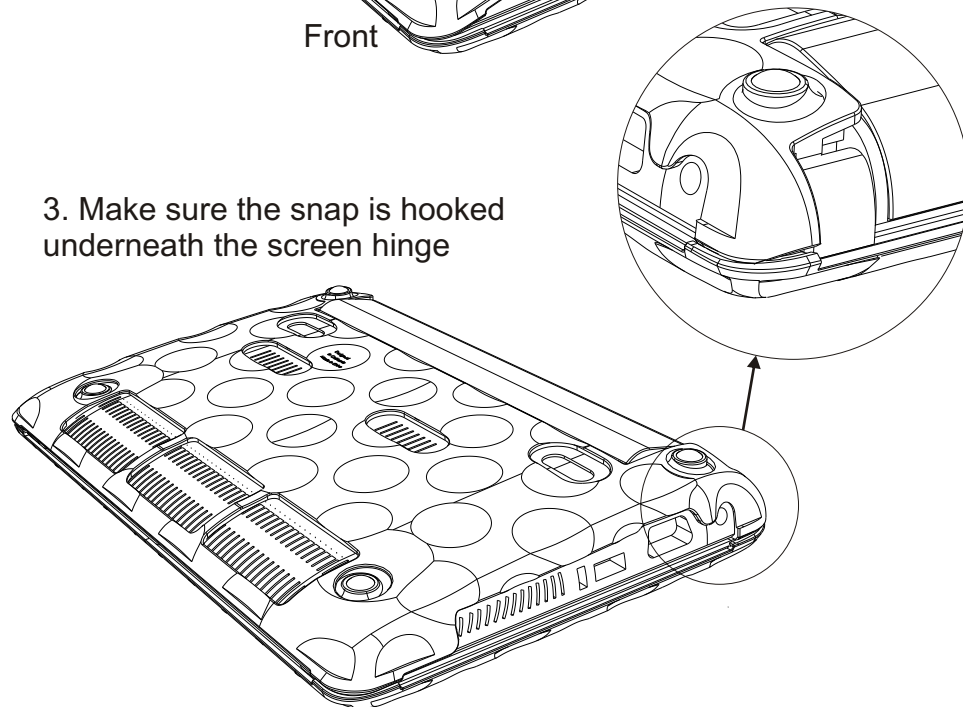


Acer Aspire One 10.1" D250

TOP BUBBLESHELL

1. Hook the front corners first then push down to snap the back

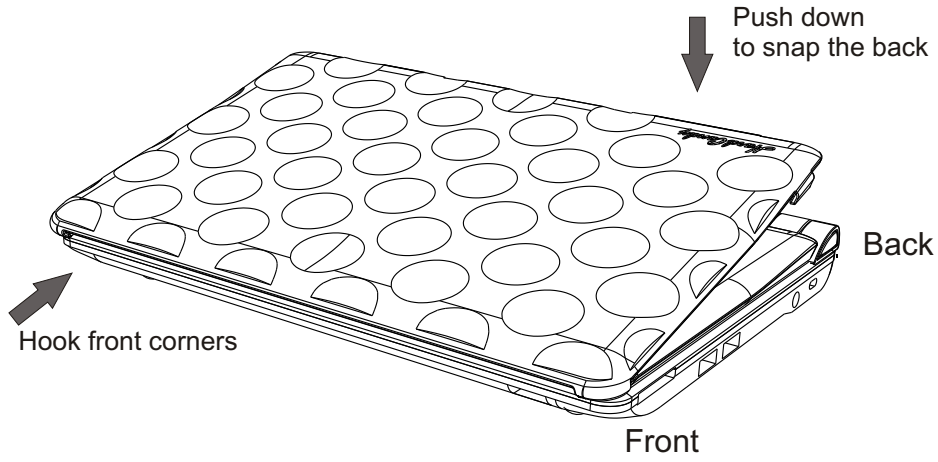


2. Top Bubble shell attached

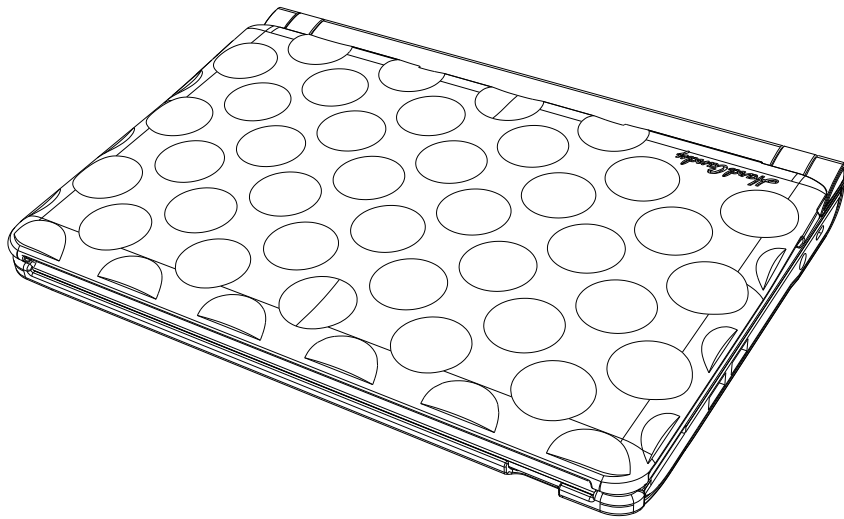


BOTTOM BUBBLESHELL

1. Turn the computer over. Hook the front corners first.
2. Push down on the back to snap the back corners

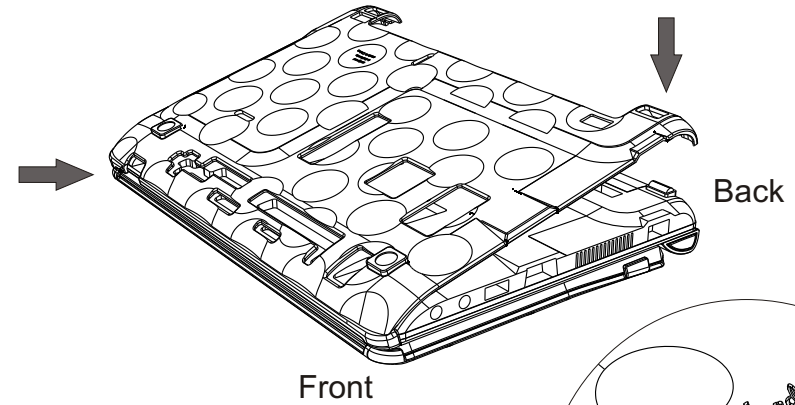


3. Make sure the snap is hooked underneath the screen hinge

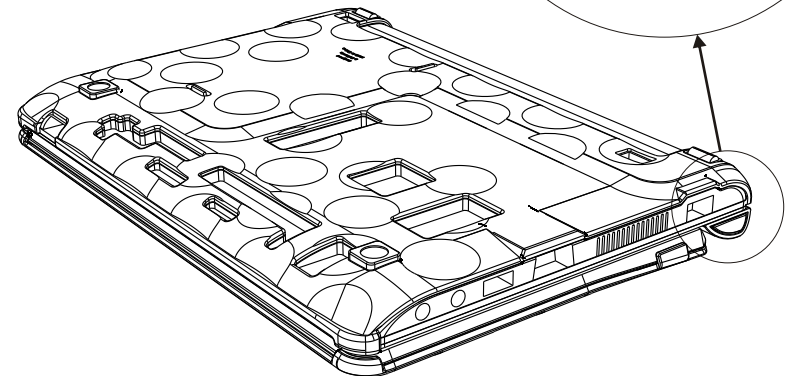


TOP BUBBLESHELL

1. Position bubble shell on top of macbook and press down attach it until you hear a click

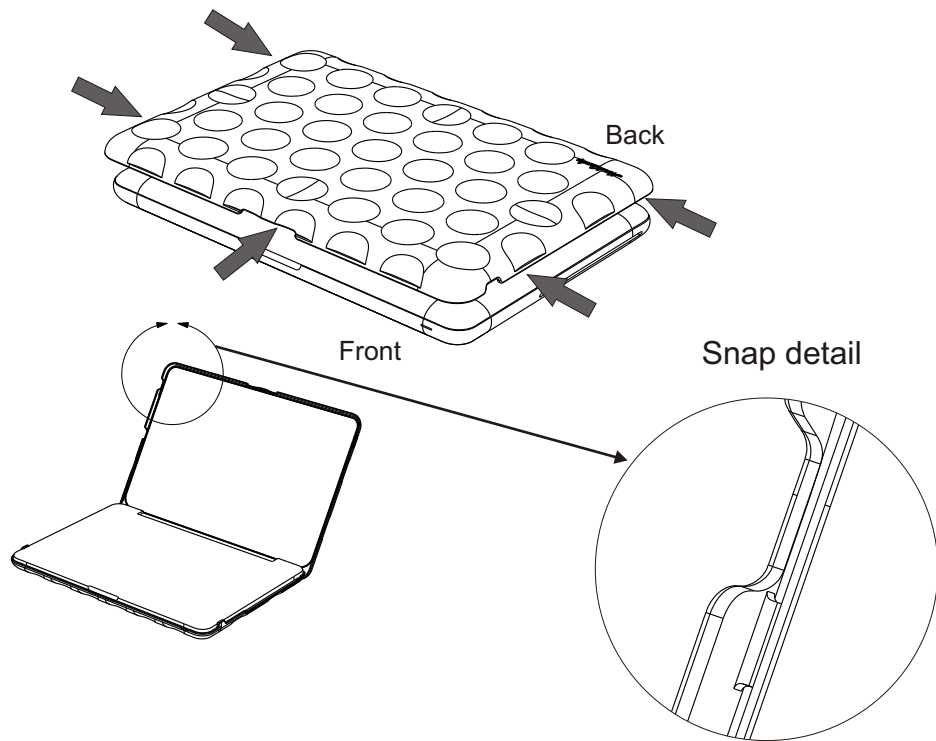


2. Top Bubble shell attached

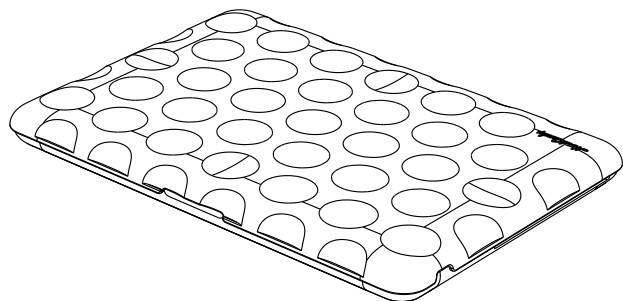

Macbook 13" white unibody

BOTTOM BUBBLESHELL

1. Turn macbook upside down.
2. Position bubble shell and hook the two hooks in the back first

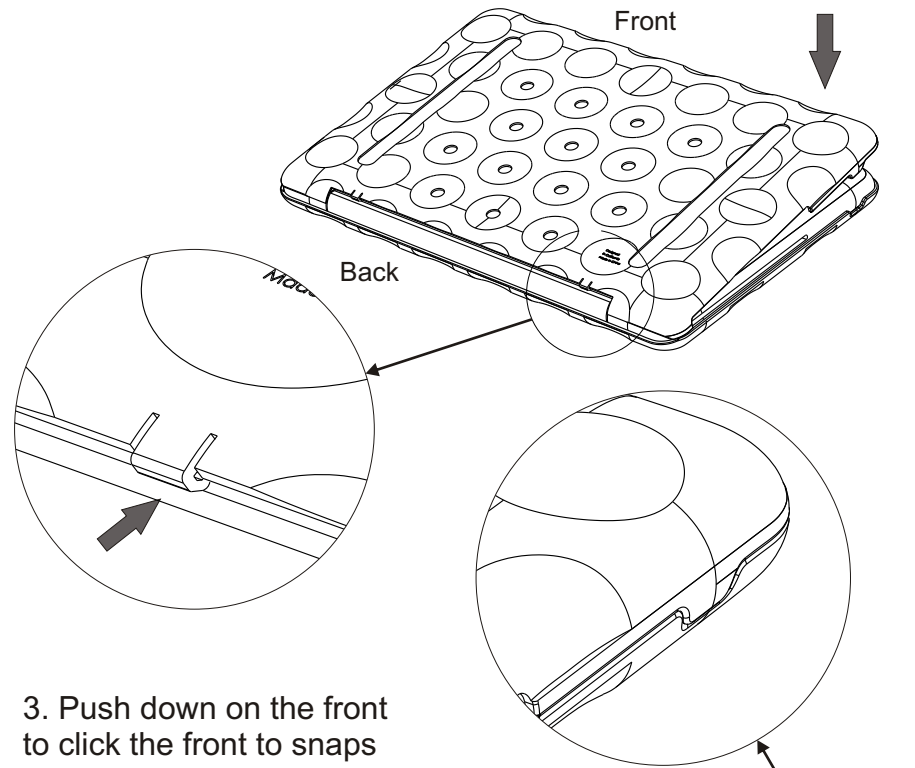

3. Push down on the front to click the front to snaps

